



PART #2026MF

FITS 2014-2018 GMC
SIERRA 1500

FRONT MUD FLAPS

INSTALLATION INSTRUCTIONS

- (1) Remove the 2 factory screws from fender flare extension.
- (2) Remove protective films from mud flap before installation.
- (3) Place mud flap over existing holes.
- (4) Use stainless steel washers provided and the 2 screws removed earlier to attach the mud flap.
- (5) After mud flap is aligned use #12x3/4 self drilling screws for the remainder of the holes. Remember not to over tighten self drilling screws.

PARTS LIST


- 2 – Mud Flaps
- 2 – #12x3/4 Stainless steel self drilling screws
- 6 – 1" Stainless steel fender washers

IMPORTANT

Manufacturer is not responsible for negligent use of vehicle or mud flaps installed, or over tightening of screws and bolts causing damage to vehicle or mud flaps.

Use of this product is subject to Company terms and conditions of sale.

MADE IN CANADA

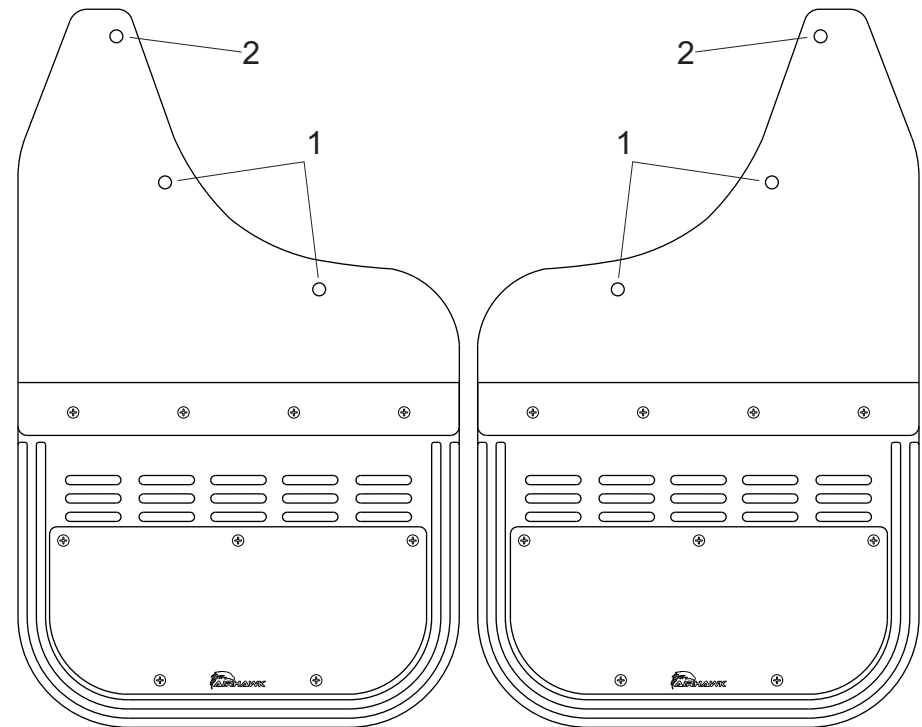

DRIVER SIDE

PASSENGER SIDE

- 1 – Existing factory screws
- 2 – #12x3/4 self drilling screws and washers

NOTE:
DO NOT OVER TIGHTEN SELF DRILLING SCREWS