



# PART #3019MR

FITS 2009-2018 DODGE RAM 1500

## INSTALLATION INSTRUCTIONS

- (1) Remove the 2 factory screws from fender flare extension.
- (2) Remove protective films from mud flap before installation.
- (3) Place mud flap over existing holes.
- (4) Use stainless steel washers provided and the 2 screws removed earlier to attach the mud flap.
- (5) After mud flap is aligned use a 1/4" drill bit to drill hole using the square hole in mud flap as a guide through the plastic liner.
- (6) Install carriage bolt with washer and hex nut in the square hole.

## PARTS LIST

- 2 – Mud Flaps
- 2 – 1/4-20x1 Stainless steel carriage bolts
- 2 – 1/4-20 Stainless steel hex nuts
- 6 – 1" Stainless steel fender washers


## IMPORTANT

Manufacturer is not responsible for negligent use of vehicle or mud flaps installed, or over tightening of screws and bolts causing damage to vehicle or mud flaps.

Use of this product is subject to Company terms and conditions of sale.

**MADE IN CANADA**

## REAR MUD FLAPS

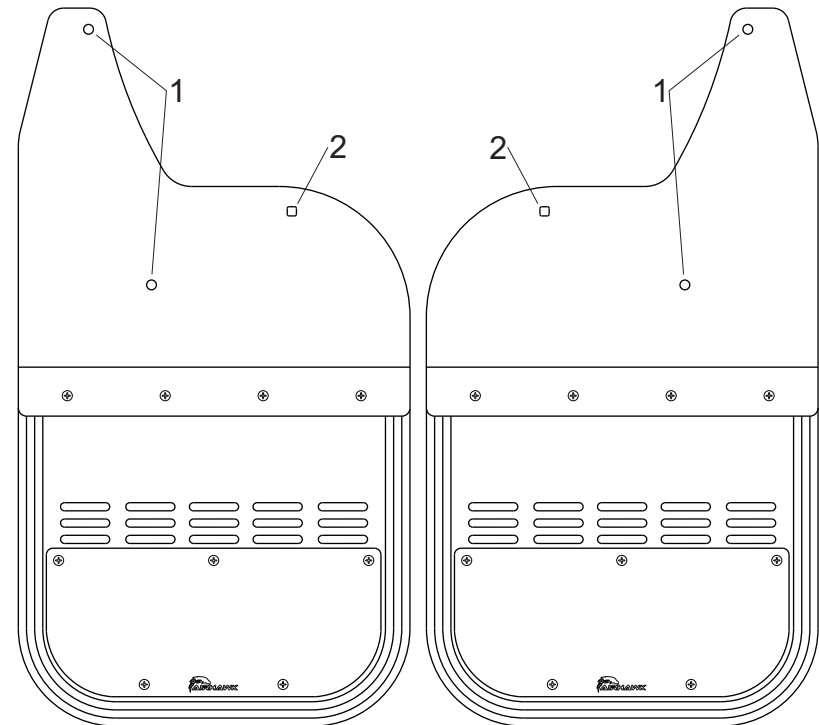

DRIVER SIDE

PASSENGER SIDE

- 1 – Existing factory screws
- 2 – 1/4-20x1 carriage bolts with hex nuts and washers

NOTE:

**DO NOT OVER TIGHTEN SELF DRILLING SCREWS**