



PART #2028MR

Fits 2020-2022 GMC Sierra 2500/3500

REAR MUD FLAPS

INSTALLATION INSTRUCTIONS

- (1) Remove the 3 factory screws from fender flare extension.
- (2) Remove protective films from mud flap before installation.
- (3) Place mud flap over existing holes.
- (4) Use stainless steel washer provided and the 3 screws removed earlier to attach.
- (5) After mud flap is aligned use #20x3/4" self drilling screws for the remainder of the holes. Remember not to over tighten self drilling screws.

PARTS LIST

- 2 - Mud Flaps
- 8 - #20x3/4" stainless steel self drilling screws
- 14 - fender washers

IMPORTANT

Manufacturer is not responsible for negligent use of vehicle or mud flaps installed, or over tightening of screws and bolts causing damage to vehicle or mud flaps.


Use of this product is subject to Company terms and conditions of sale.

MADE IN CANADA

DRIVER SIDE

PASSENGER SIDE

#20x3/4" self drilling screws (SDS)

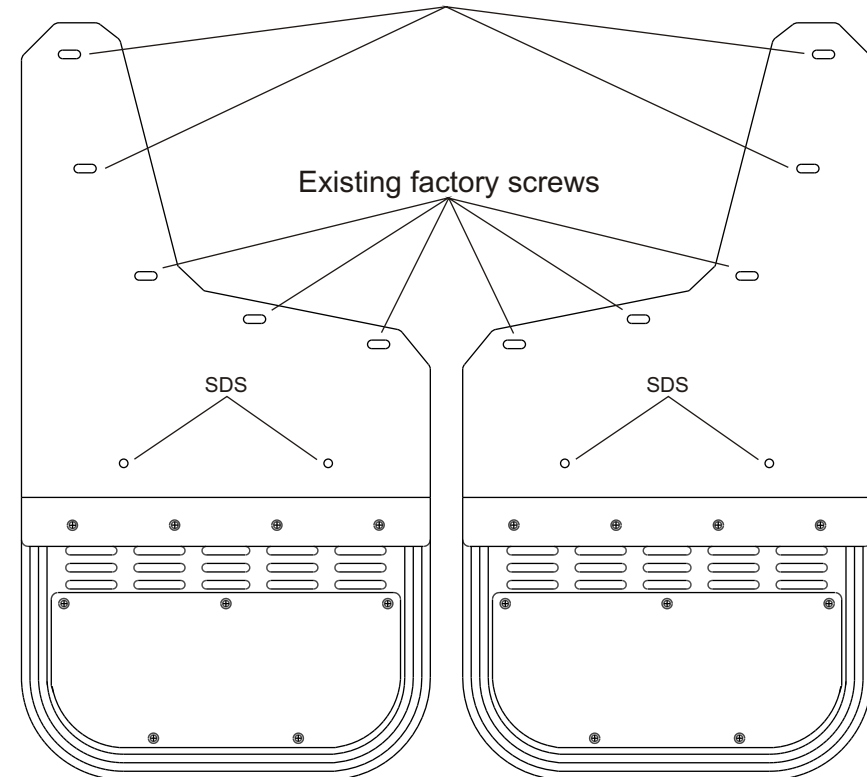

Note: DO NOT OVER TIGHTEN SELF DRILLING SCREWS